


Antenna Connection Options

JP1 Select Main or Aux Antenna

JP2 Select Main Ant strapped feeder or GND

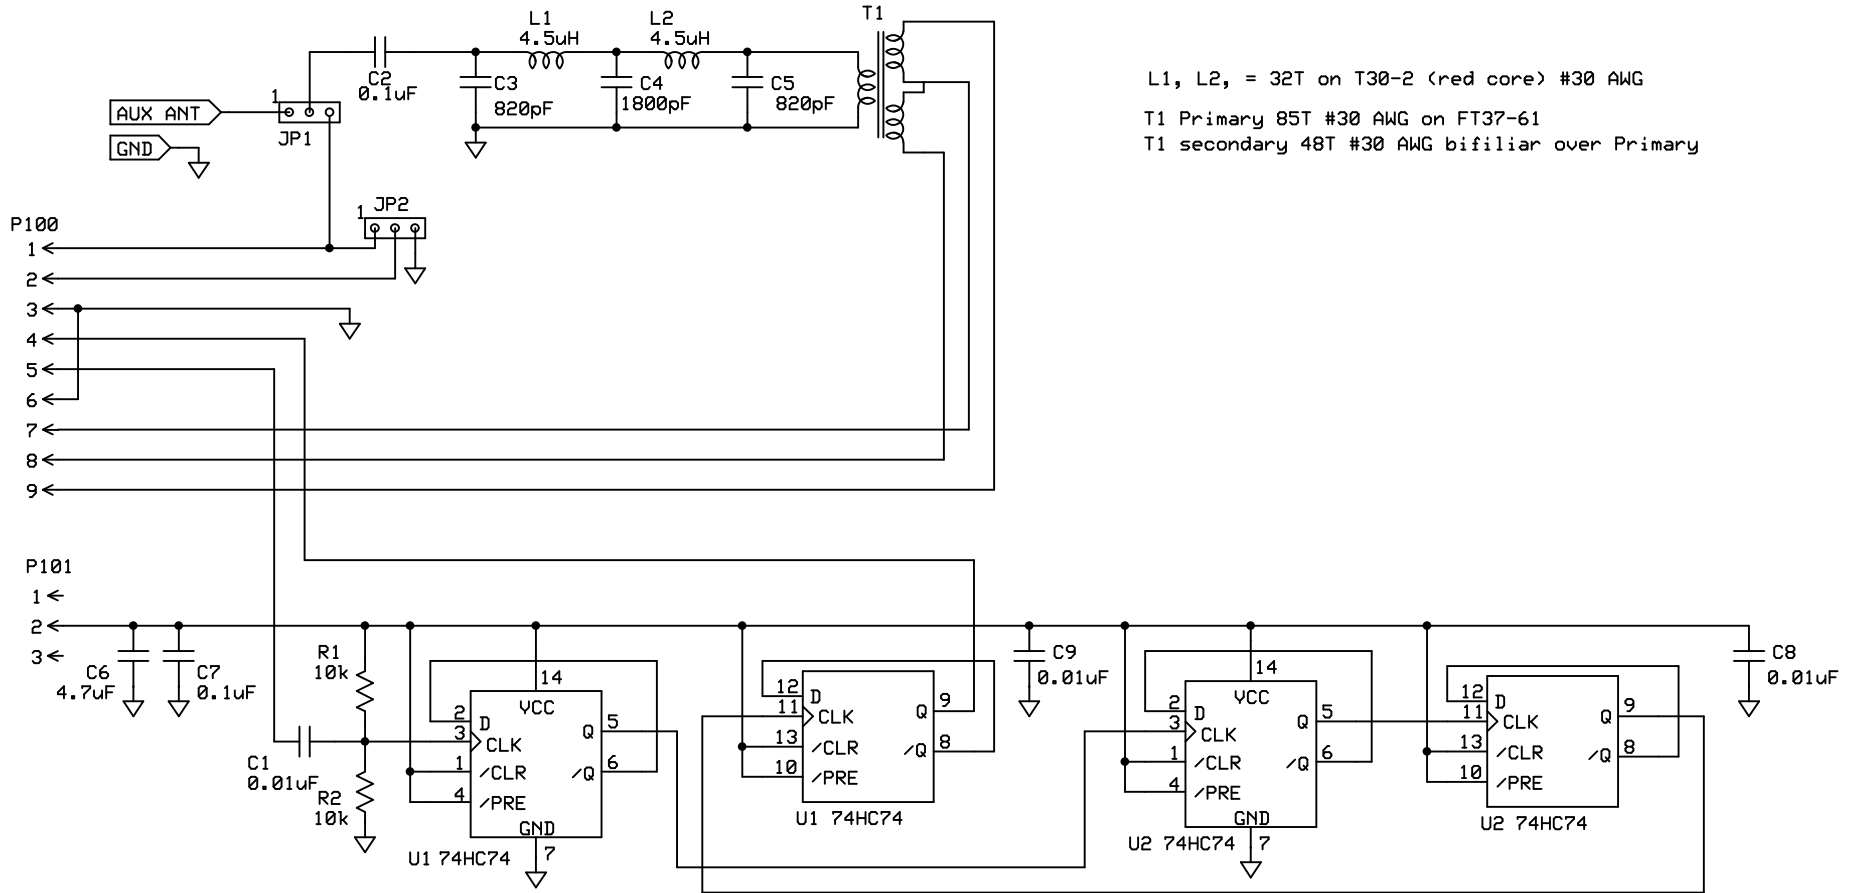

L1, L2, = 32T on T30-2 (red core) #30 AWG

T1 Primary 85T #30 AWG on FT37-61

T1 secondary 48T #30 AWG bifilar over Primary